
TIMED MIST DISPENSER

How to Use This Dispenser

1. Remove the air mist dispenser from the box.
2. Attach the anchor and screw to the wall, we recommend mounting higher than head height.
3. Remove the can of air freshener (sold separately) from its packaging.
4. Push the button on the top of the mister to open the mister.
5. Place two AA batteries on either side of the main mister cavity. The LED light blinks five times.
6. Set the OFF/24H/DAY/NGT switch to 24H, DAY, or NGT.
7. Set the timer switch to 5, 10, 15, or 30 minutes, depending on how often the mister should spray.
8. Press the air freshener can into the mister cavity, with the nozzle pointing out and the can's metal ring fitting over the white plastic holders on the dispenser. You may need to manually move the nozzle activator on the mister to get the can in place.
9. Close the dispenser so it clicks shut. You should be able to see the nozzle of the can through the hole in the front of the dispenser. The LED will continue to blink. Do not look directly at the nozzle outlet.
10. Hang the dispenser on the installed screw.

Warnings

- Always point the time mister away from your face and eyes.
- Remove the dispenser from the wall before opening it.
- Do not shake the time mist dispenser to discern whether the spray can needs to be refilled. Open the dispenser – while pointing it away from you – and then remove the can to feel its weight. Replace the canister the same way as putting in the original – see your local ordinances about recycling empty cans.
- Before replacing the batteries, make sure the OFF/24H/DAY/NGT switch is turned to OFF.
- In case of contact between spray and eyes, nose, or mouth, wash with water and seek medical attention if necessary. Do not ingest the contents of the spray canister.
- Do not expose the canister to temperatures above 40° C/104° F, which means taking care not to install it directly above an oven or heater.