


ELECTRONIC WATER TIMER

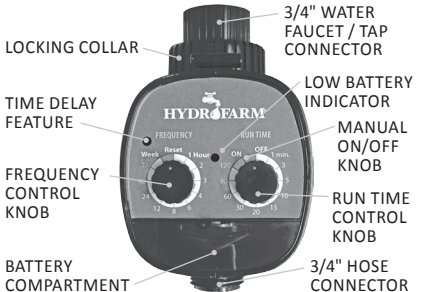

Hydrofarm.com



TECHNICAL DATA

USE COLD WATER ONLY
 WATER PRESSURE: MAX 150 PSI (10 BAR).
 TEMPERATURE: MAX 140°F (60°C)

LOW BATTERY INDICATOR

THE LOW BATTERY INDICATOR LIGHT FLASHES CONTINUOUSLY WHILE THE BATTERIES STILL HAVE SUFFICIENT POWER TO OPERATE THE TIMER. WHEN THE BATTERY POWER IS LOW, THE LOW BATTERY INDICATOR WILL REMAIN ON, AND

THE VALVE WILL BE SHUT OFF. THE LIGHT WILL GO OUT WHEN THE BATTERY IS **COMPLETELY DEAD**.
FREQUENCY: (1, 2, 3, 4, 6, 8, 12, 24, 48, 72 HOURS, OR 1 WEEK)
RUN TIME: (1, 3, 5, 10, 15, 20, 30, 60, 90, OR 120 MINUTES)

SET UP DATE & TIME	FREQUENCY	RUN TIME
:		
:		
:		

INSTALLATION:

1. OPEN THE BATTERY COMPARTMENT AND INSERT TWO AAA, 1.5V ALKALINE BATTERIES.
2. AFTER INSTALLING THE BATTERIES, TEST THE UNIT BY TURNING THE **RUN TIME** KNOB FROM THE **OFF** POSITION TO THE **ON** POSITION. YOU SHOULD HEAR THE SOUND OF THE MOTOR WITHIN 30 SECONDS.
3. IF YOU DO NOT HEAR THE SOUND OF THE MOTOR. CHECK THE BATTERIES AND MAKE SURE THEY ARE INSTALLED CORRECTLY.
4. HOLD THE UNIT STEADY. LOOSEN THE LOCKING COLLAR UNTIL THE INNER BLACK COLLAR IS LOOSE. SCREW THE BLACK COLLAR ONTO THE FAUCET/TAP UNTIL IT IS TIGHT, THEN TIGHTEN

THE LOCKING COLLAR. TURN ON THE FAUCET/TAP. DO NOT USE A WRENCH OR PLIERS.

5. TURN THE KNOB AND SET UP THE **FREQUENCY** TIME AND THE **RUN TIME** .
6. AT ANY TIME YOU CAN USE THE MANUAL **ON/OFF** FUNCTION. BUT REMEMBER, WHEN FINISHED, THE RUN TIME MUST BE TURNED BACK TO STEP NO. 5 AS YOUR ORIGINAL SET-UP TIME.
7. **MAKE SURE THE PROTECTIVE COVER REMAINS FIRMLY ATTACHED TO THE WATER TIMER.**

Hydrofarm.com

 




SAMPLE TIMER SET-UP:

I WISH TO WATER EVERY MORNING AT 6:00 AM AND EVERY AFTERNOON AT 6:00 PM FOR WATERING 10 MINUTES:

ON THE FIRST DAY AT 6:00 AM OR 6:00 PM, TURN THE **FREQUENCY** KNOB TO 12 AND THE **RUN TIME** KNOB TO 10. AFTER 12 HOURS, THE WATER TIMER WILL AUTOMATICALLY BE ON AND SUPPLY WATER. 10 MINUTES LATER, IT WILL AUTOMATICALLY BE OFF. THIS WILL REPEAT EVERY DAY AT 6:00 AM AND 6:00 PM.



B. EVERY MORNING AT 7:00 AM FOR 20 MINUTES:

THE FIRST DAY AT 7:00 AM, TURN THE **FREQUENCY** KNOB TO 24 AND THE **RUN TIME** KNOB TO 20. THE NEXT DAY AT 7:00 AM, THE WATER TIMER WILL AUTOMATICALLY TURN ON AND SUPPLY WATER. 20 MINUTES LATER, IT WILL AUTOMATICALLY TURN OFF. THIS WILL REPEAT EVERY DAY.



TROUBLESHOOTING GUIDE:

IF THE WATER DOES NOT FLOW OUT OF THE TIMER, CHECK THE FOLLOWING.

1. THE FAUCET / TAP SHOULD BE TURNED ON.
2. MAKE SURE YOUR BATTERIES ARE IN GOOD CONDITION.
3. CHECK THE FREQUENCY AND RUN TIME TO ENSURE THEY ARE THE SAME AS YOU RECORDED.
4. MAKE SURE YOUR FREQUENCY TIME IS LONGER THAN YOUR RUN TIME.
5. IF THE TIMER STILL DOESN'T WORK, PLEASE CONTACT THE STORE FROM WHICH YOU BOUGHT IT.

TIME DELAY FEATURE:

YOU CAN DELAY YOUR WATERING START TIME USING THE **TIME DELAY** FEATURE. USE THE POINT OF THE PEN TO DEPRESS THE BUTTON FOR EACH HOUR YOU WANT TO DELAY WATERING. YOU CAN DELAY WATERING IN 1 HOUR INTERVALS ONLY, UP TO A MAXIMUM OF 12 HOURS. FOR EXAMPLE, TO DELAY WATERING FOR 3 HOURS, DEPRESS THE TIME DELAY BUTTON 3 TIMES.